

FIG.1

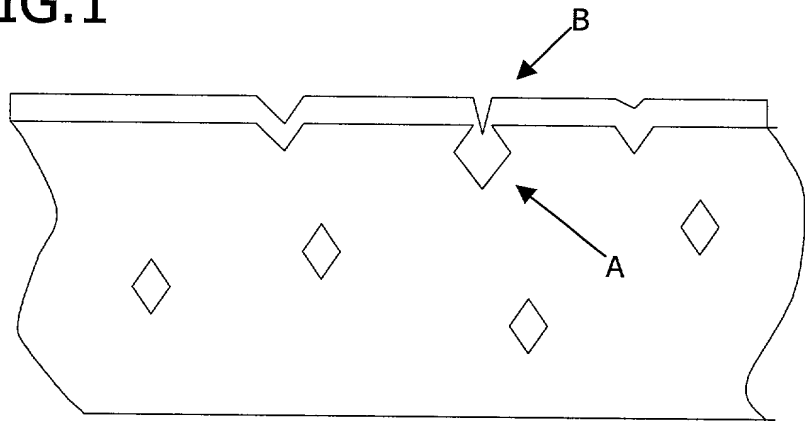


FIG. 2

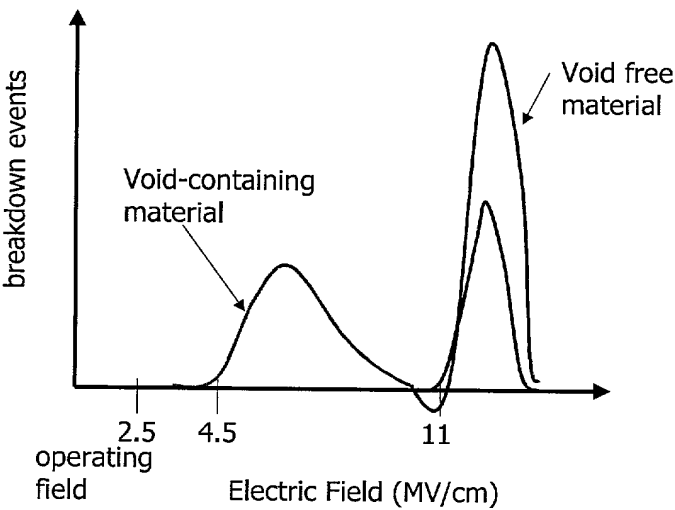


FIG. 3

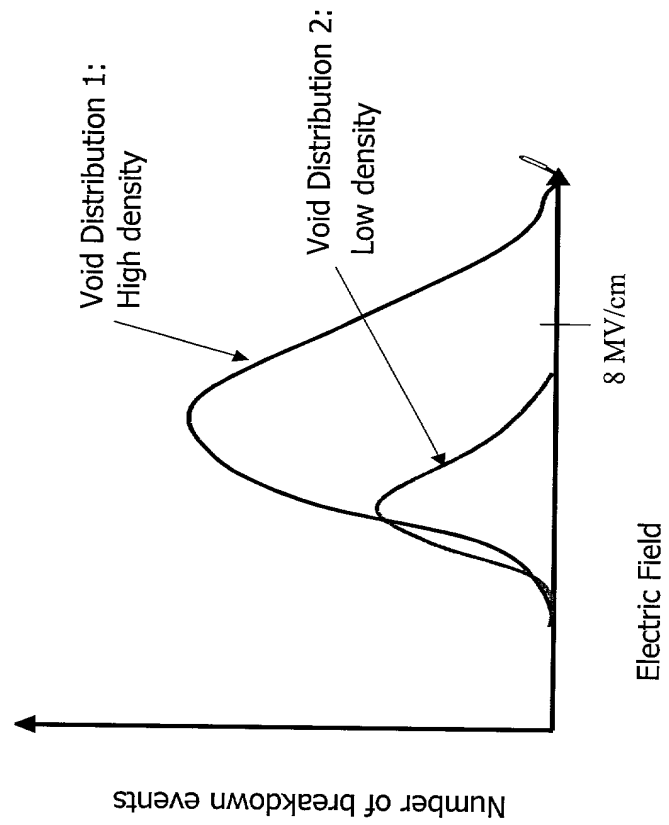


FIG. 4

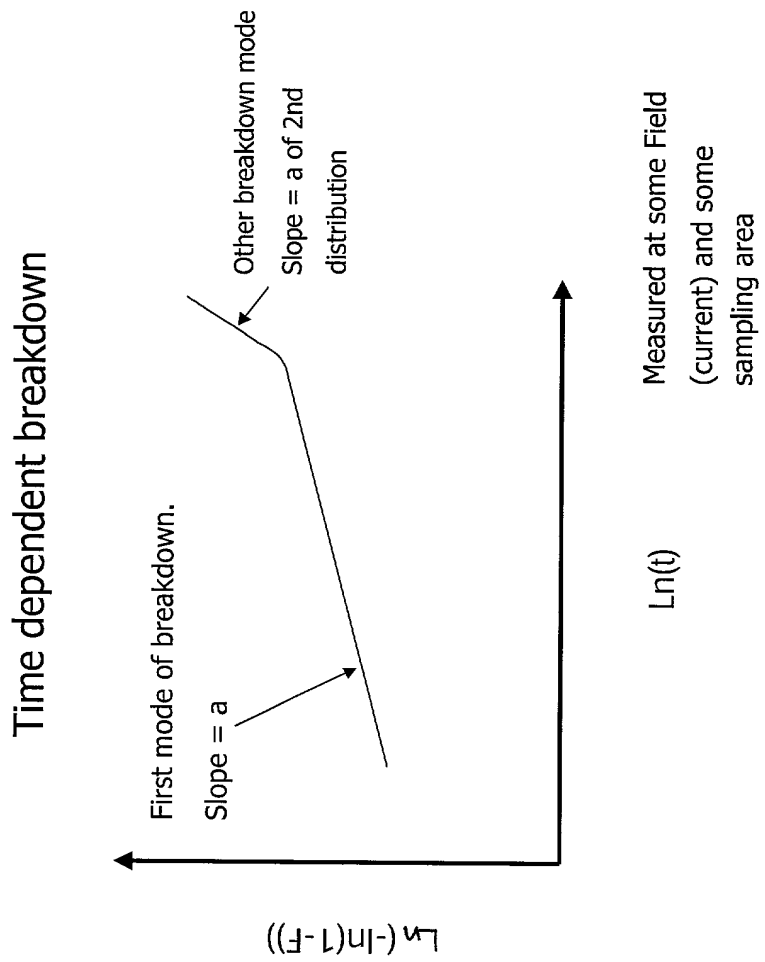


FIG. 5

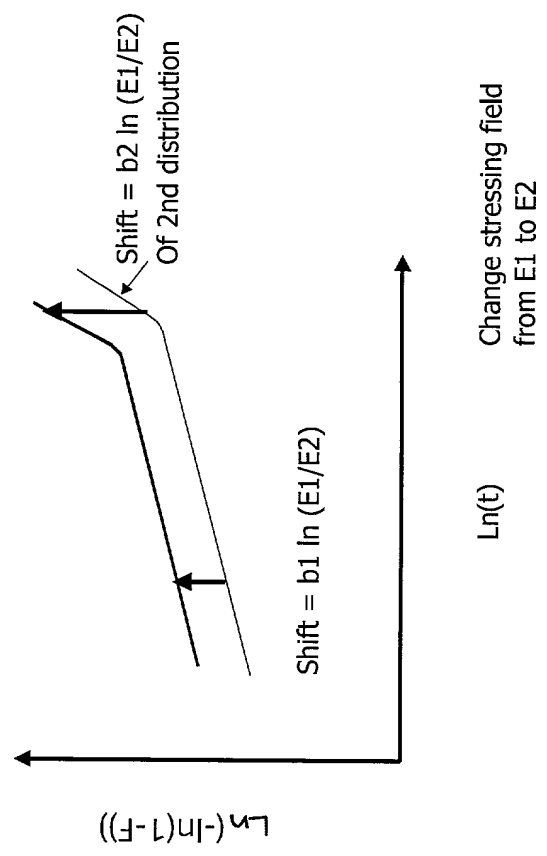


FIG. 6

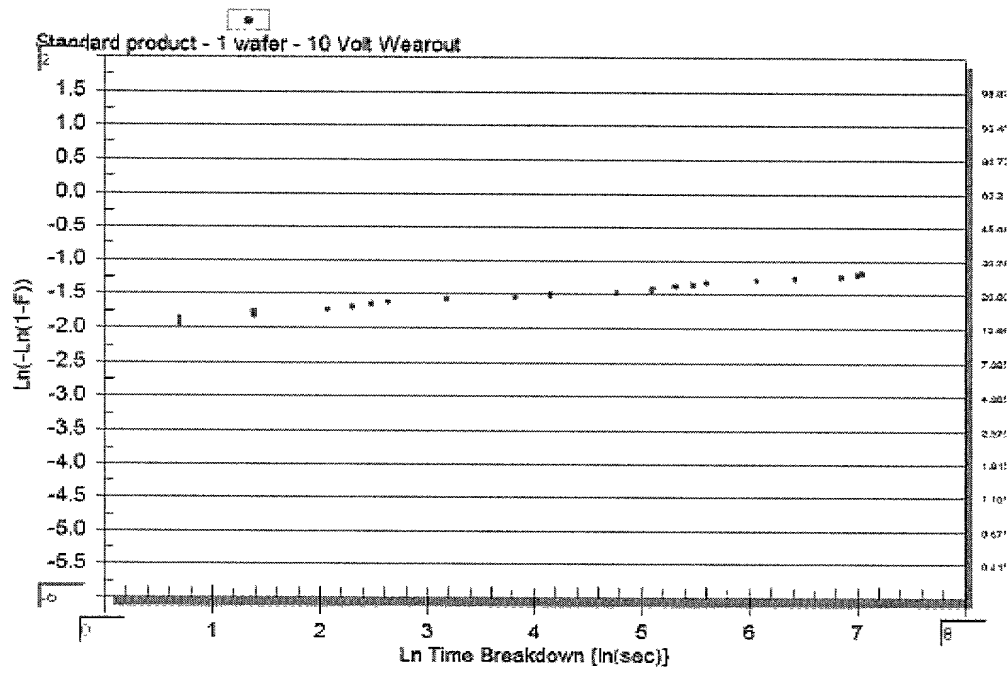


FIG. 7

Field dependent breakdown: get more information by changing ramp rate

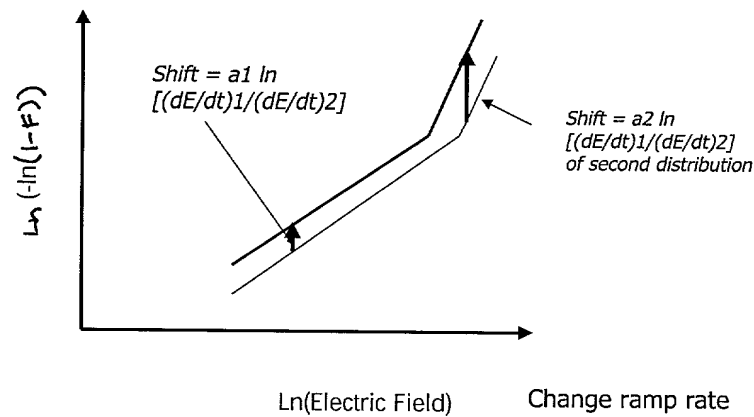


FIG. 8

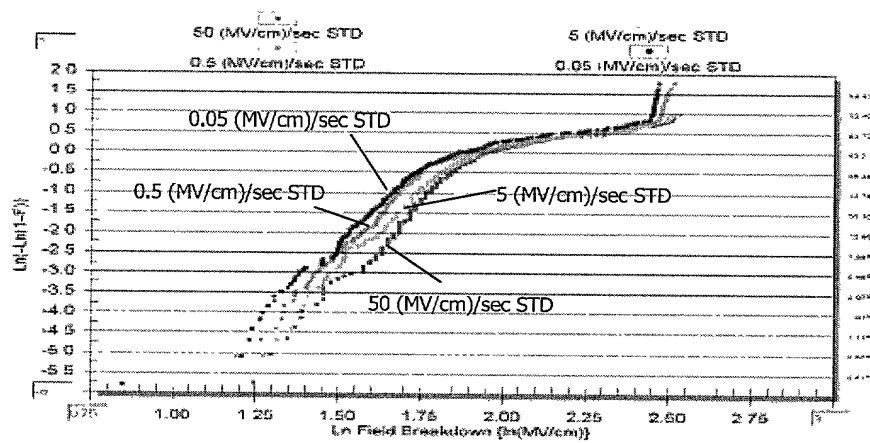


FIG. 9

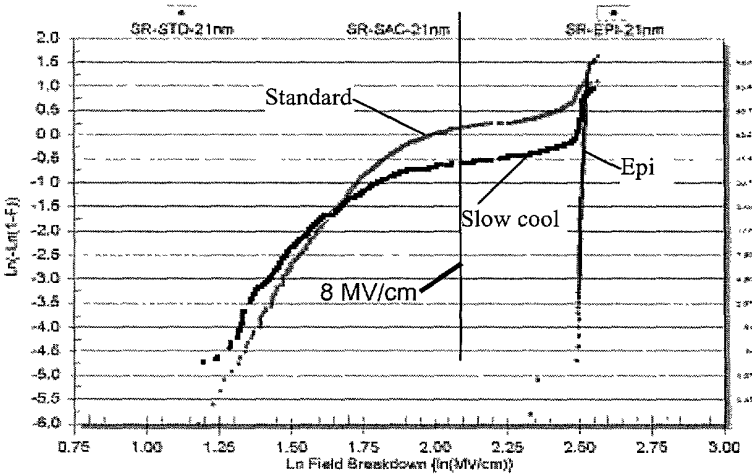


FIG. 10

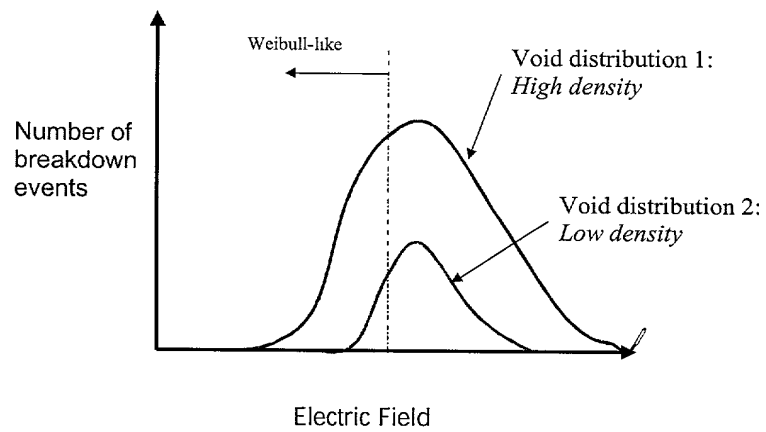


FIG. 11

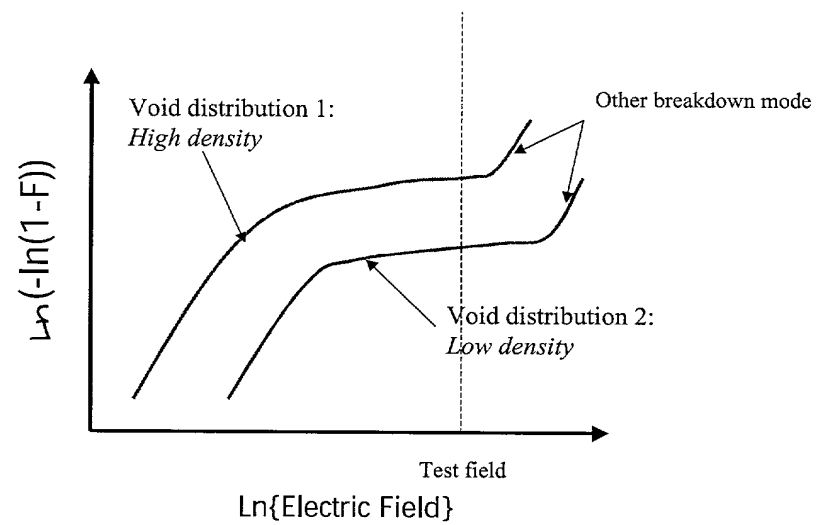


FIG. 12

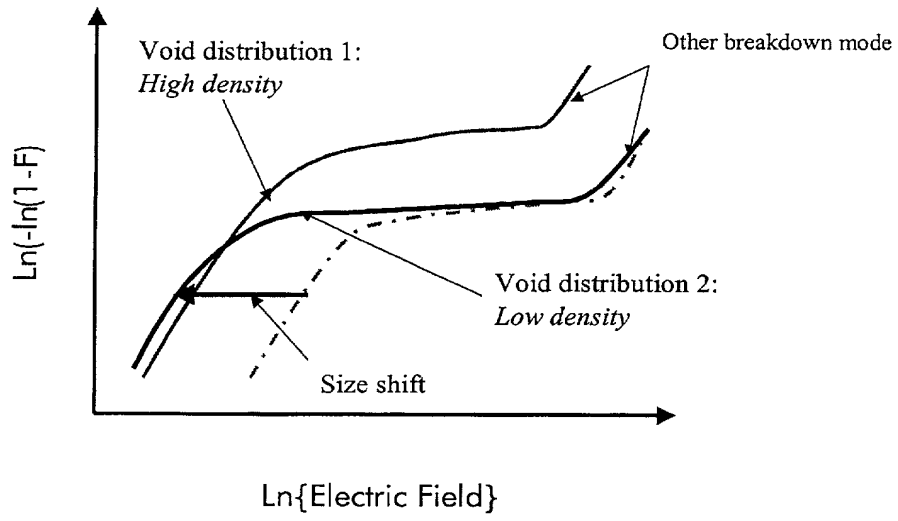


FIG. 13

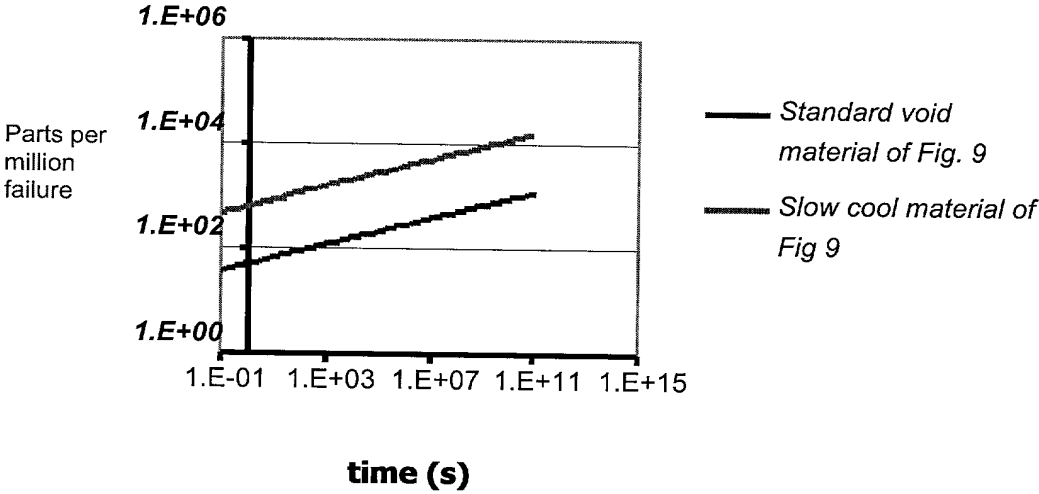


FIG. 14

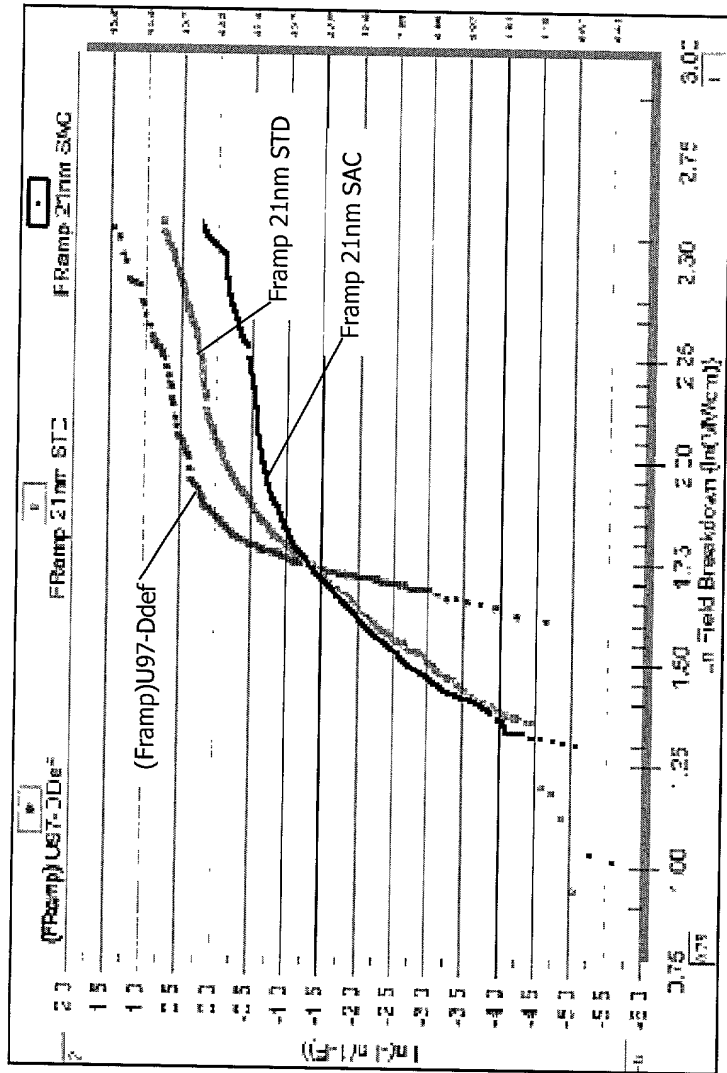


FIG. 15

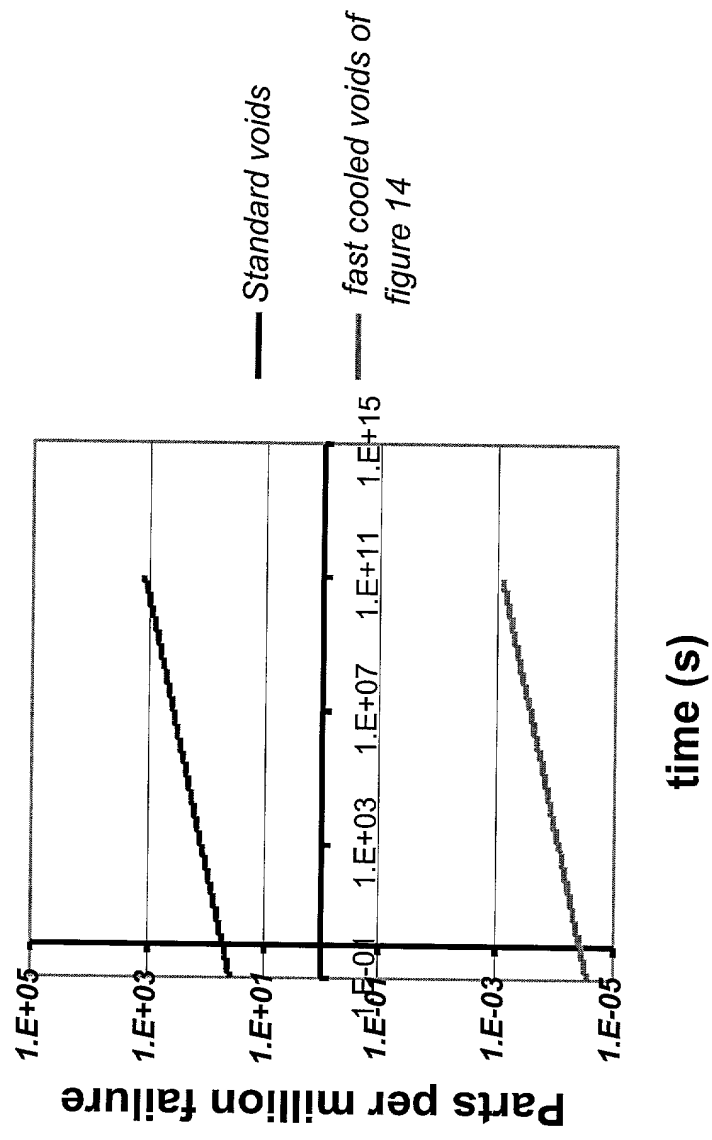


FIG. 16

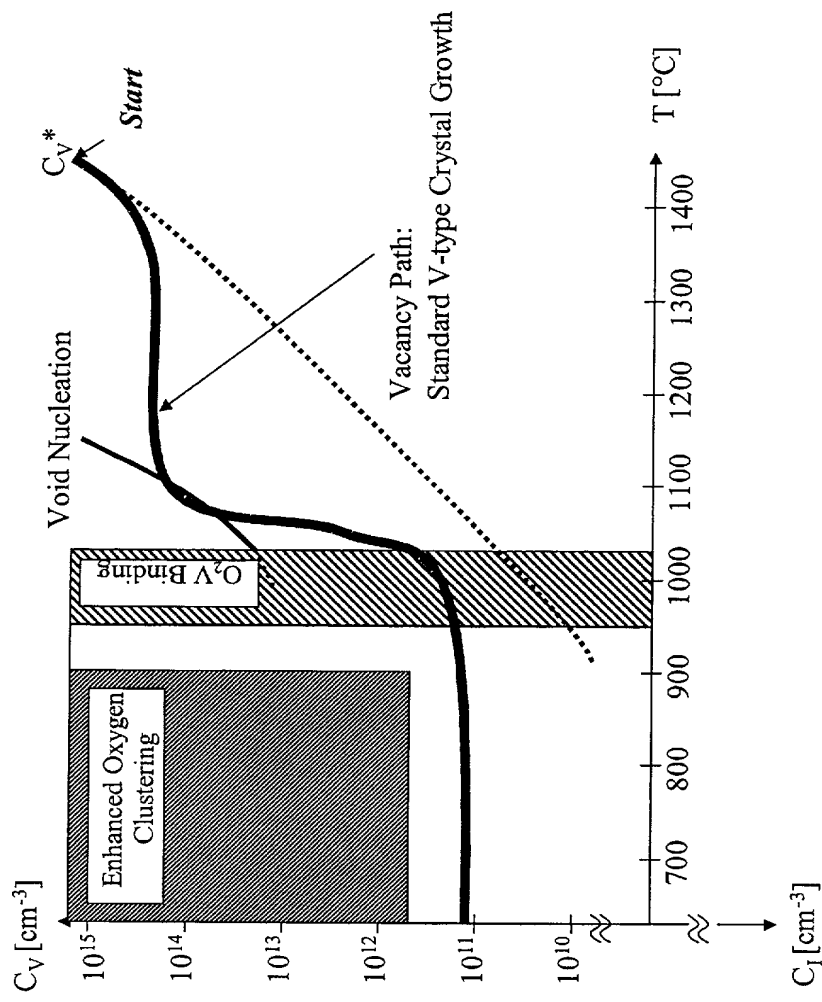
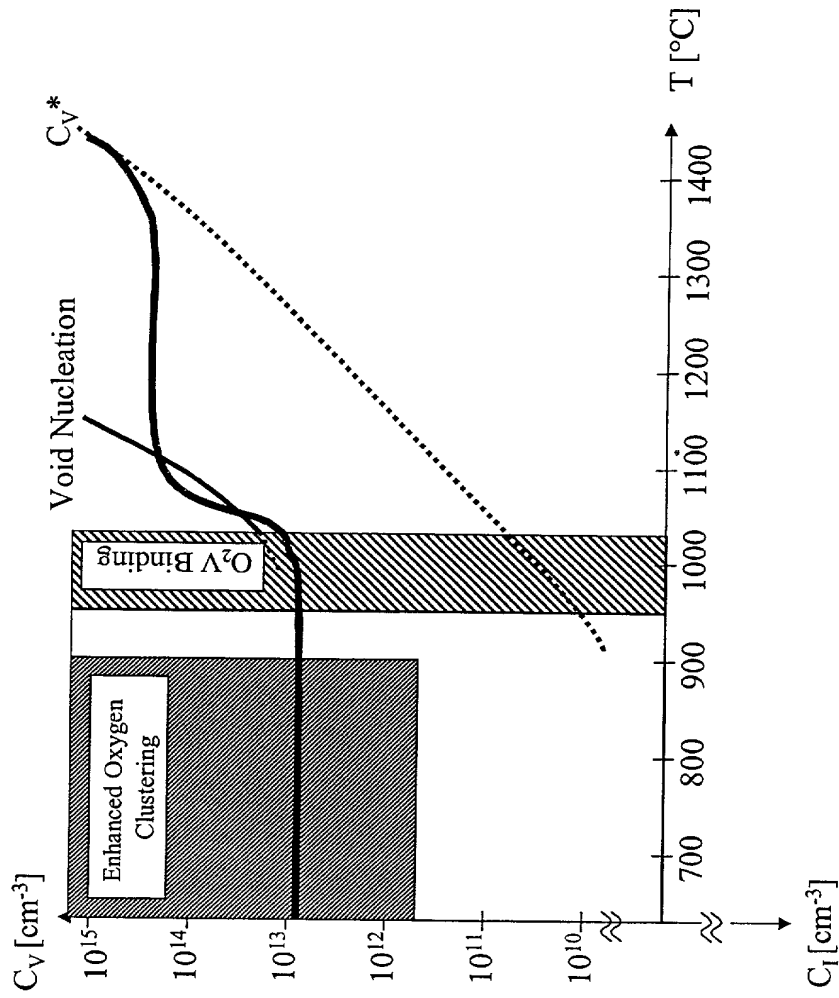


FIG. 17



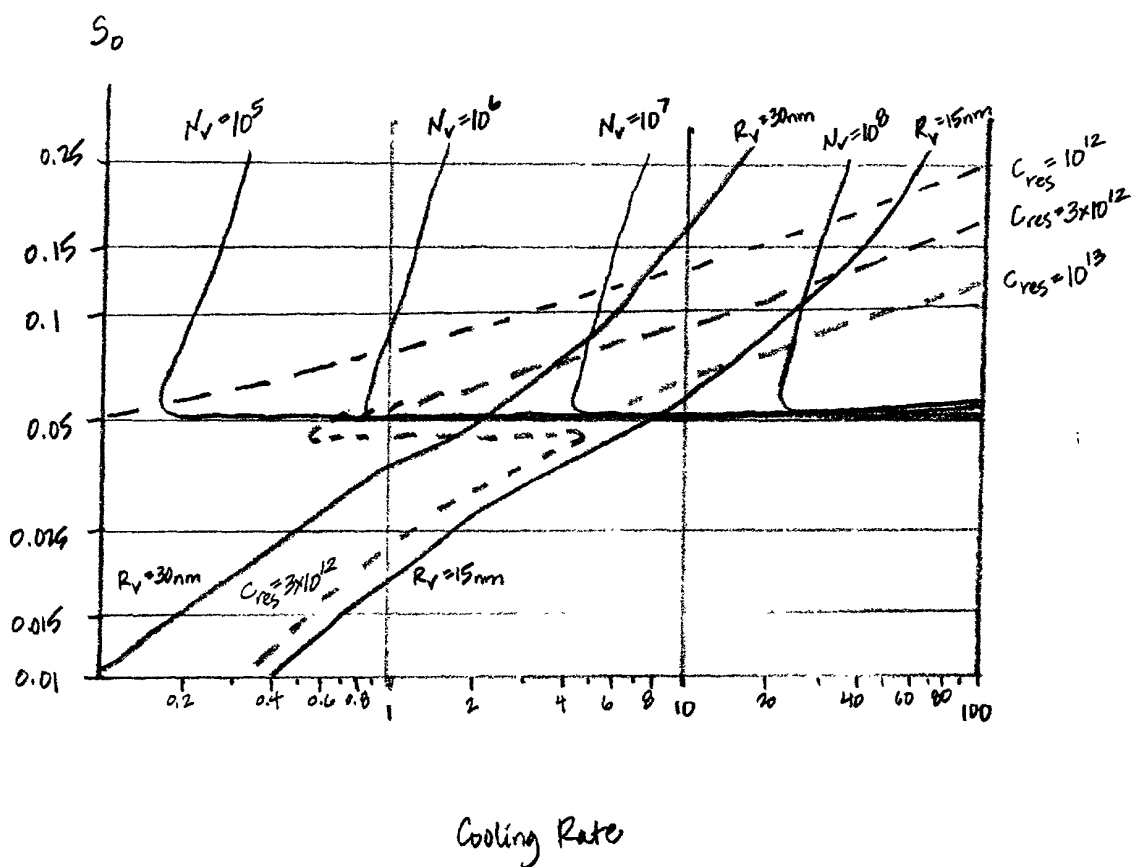


FIG. 1B

20250106 16:00


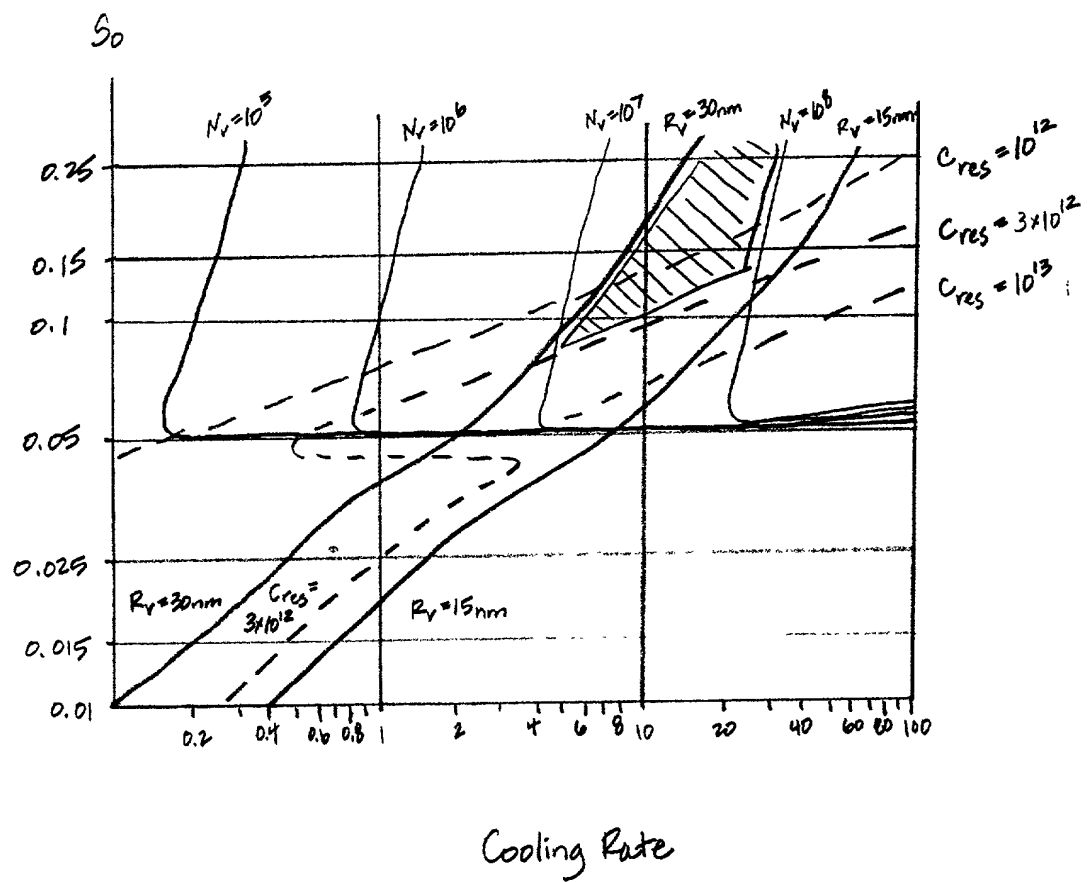


FIG. 19

10039196-010202

S_0

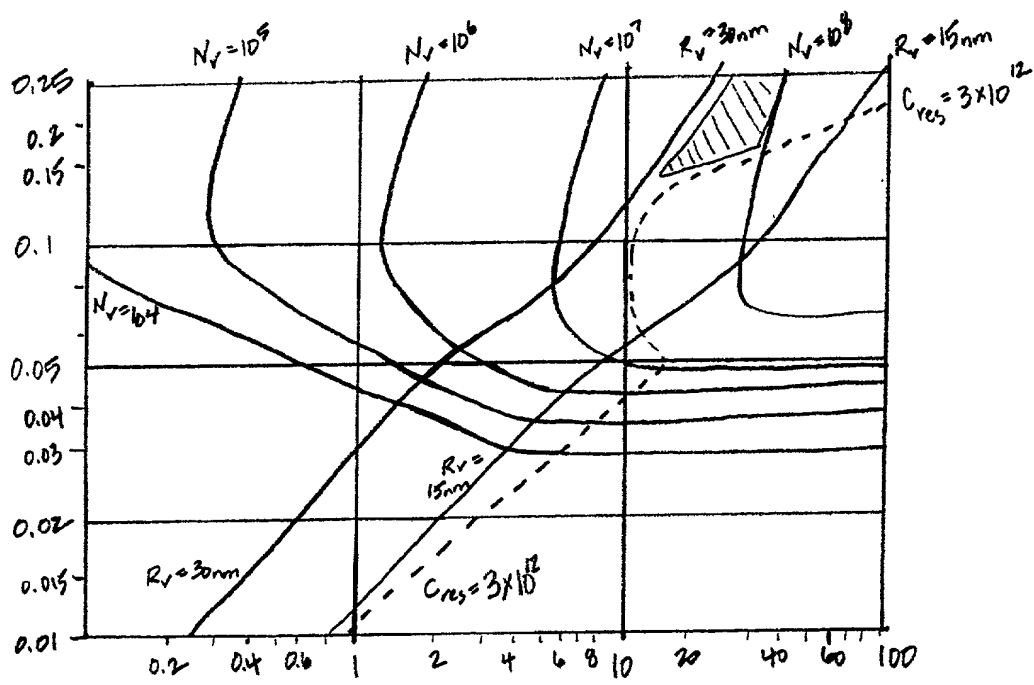

Cooling Rate

FIG. 20